



# 1. Packing List

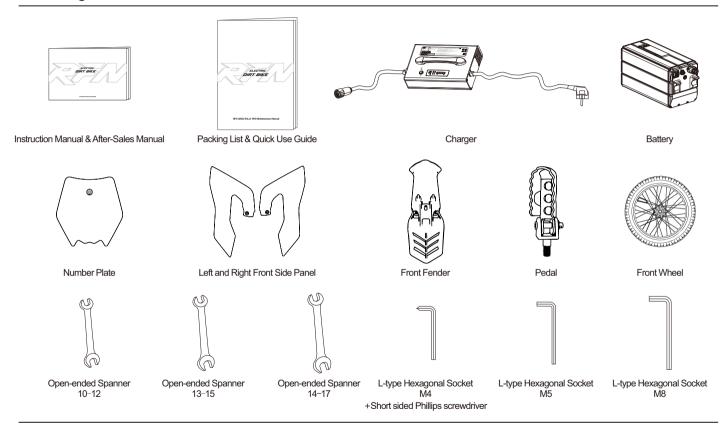


## 2.1 Installation of Steering Handle and Instrument

1. Remove the upper cover bolt.

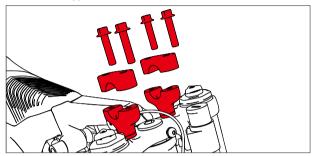


2. Arrange the wiring harness and install the handlebar and instrument bracket as shown in the figure.


( The instrument bracket is fixed on the upper cover of the handlebar )

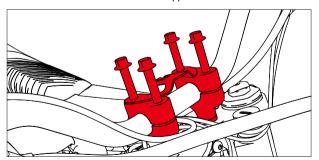

3. Adjust the crossbar angle and tighten the bolts on the upper cover of the handlebar (torque 33-45Nm)

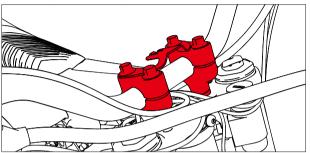


4. Install the instrument to the instrument bracket.

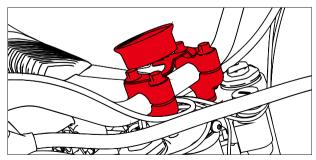


#### 2.2 Installation of Front Fender and Number Plate


1. Use an M4 Allen wrench to unscrew the bolts, install the front fender, and ensure that the clip of the fender is clamped into the hole of the lower connecting plate.

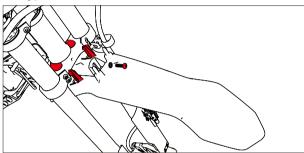


2. Tighten the fender bolts (torque 4-5Nm).

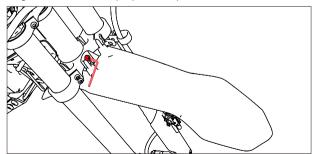

3. Insert the lower locating hole of the number plate into the front fender pillar and install the number plate bolt.

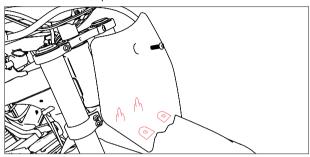


4. Tighten the number plate bolts (torque 4-5Nm).

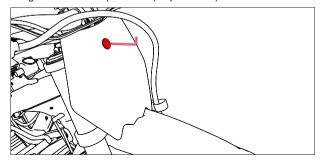


## 2.3 Installation of Left and Right Front Side Panel


1. Remove the seat cushion and battery cover.

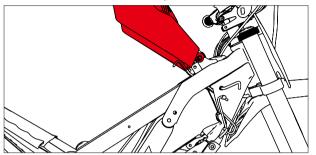


2. Snap the side panel into the side panel bracket.

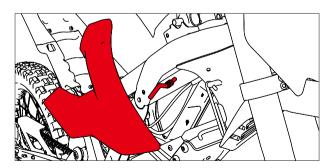

3. Install the fixing bolts on the inside of the side plate and tighten (torque 3-3.5Nm).

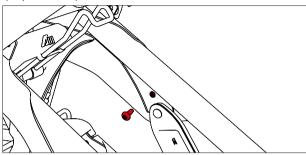


4. Install the fixing bolts on the outside of the side plate and tighten (torque 4-5Nm).

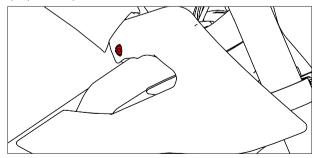


#### 2.4 Installation of Lower Rocker Arm


1. Pull the rocker arm down so that the 2 bolt holes in front and behind the rocker are exposed.

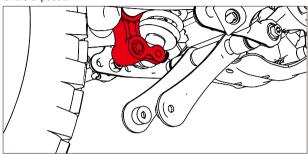


2. Align the cradle with the rear shock absorber hole, insert the T-bolt from the right side of the vehicle, make sure that the bolt anti-rotation plane is matched with the anti-rotation plane of the rocker, install the T-bolt nut and tighten (torque 30-40Nm).

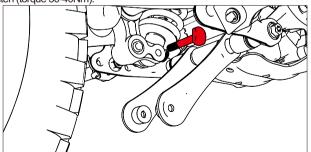

3. Return the rocker arm to align the cradle with the rocker mounting hole, insert the bolt from the right side of the vehicle and install the nut.

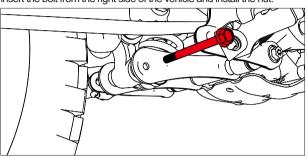


4. Tighten the rocker bolts (torque 30-40Nm).

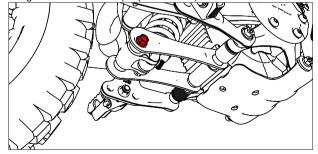


#### 2.5 Installation of Front Wheel


1. Loosen the four axle locking bolts.

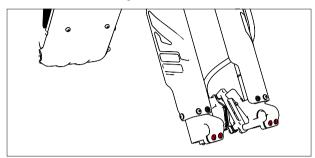


2. Install the left and right spacer sleeves of the front wheel.
\*Note that the long spacer sleeve is installed on the side of the brake disc.

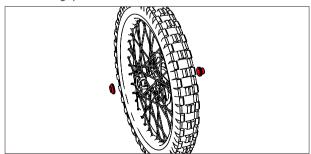

3. Install the front axle.

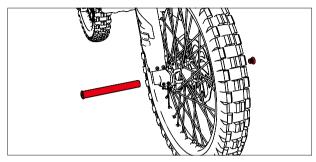


4. Tighten the front axle bolts (torque 28-30Nm), and then tighten the four axle locking bolts (torque 8-10Nm).

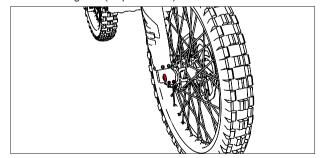

### 2.6 Installation of Battery


1. Unscrew the seat fixing bolts.

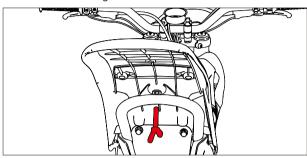


2. Open the cushion and take out the support rod to support the cushion.




3. Open the battery locking mechanism and remove the battery cover.

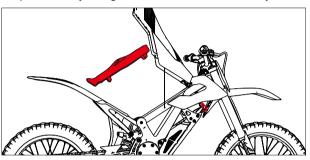


- Insert the battery, align the front end of the battery with the rubber base, press the front end in, and then press the rear end of the battery down to snap it into the battery bracket.
- \* Note that the battery connector is mounted towards the rear wheel.

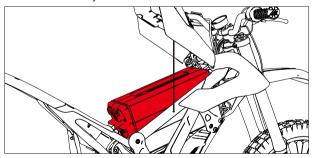


5. Connect the main power line and the controller line according to the corresponding interface.

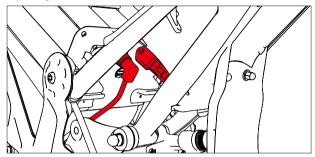


6. Retract the battery cover and snap the cover clip onto the cover. \* Note that the underside of the cover should be inserted into the rear connection port.

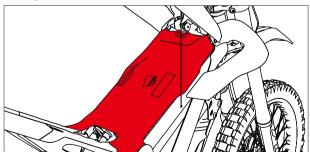

7. Lock the battery locking mechanism tightly.

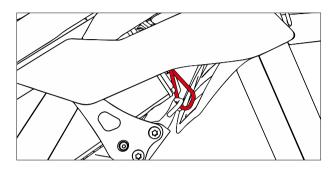


8. Cover the seat and lock the seat fixing bolts.

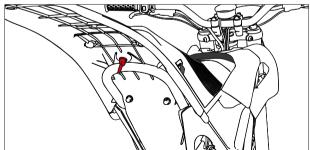



### 2.7 Installation of Pedal


1. Install the foot pedal to the designated hole position, and ensure that the locating pin is clamped into the locating hole.

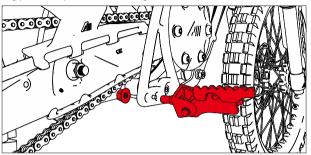

2. Install nuts and tighten (torque: 40-45Nm).

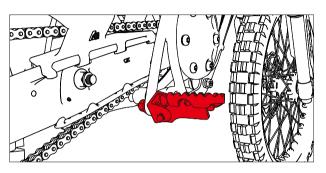


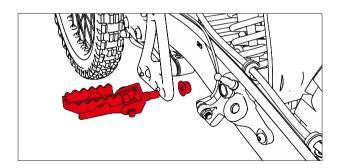

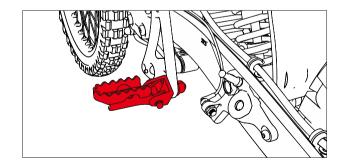


### 2.8 Installation of Single Support


Unscrew the single support fixing bolts and the gasket

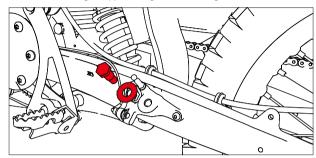


3. Tighten the bolts. (Torque 38-55Nm)

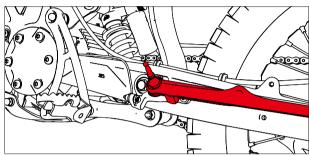

2. Install the gasket between the single support seat and the single support, and install the bolts.

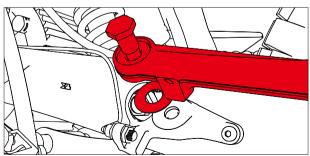

4. Install the single support spring (fix the double spring on the fixing hole and the seat)

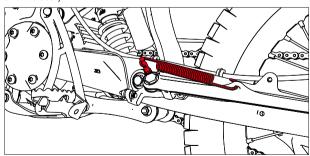



WWW.RFNBIKE.COM

ZHEJIANG APOLLO SPORTS TECHNOLOGY CO., LTD.